







C19 ASSEMBLY INSTRUCTIONS






NOTE: ASSEMBLY ITEMS ARE PROVIDED IN A BAG IN THE BOX

Secure screws tightly or product damage may occur.


Visit hoodseating.com for assembly download documents and for user instructions.

HOOD
HOODSEATING.COM


| | | |
|---|-----|----------|
|  | 5 x | CASTORS |
|  | 1 x | BASE |
|  | 1 x | GAS LIFT |
|  | 1 x | SEAT |
|  | 1 x | BACK |
|  | 2 x | ARMS |

| | QTY | ITEM | SIZE | SPARES | |
|---|-----|------|-----------|--------|---|
|  | A | 3 x | M8 | 20mm | 1 |
|  | B | 6 x | M4 | 35mm | 1 |
|  | C | 3 x | Washers | | |
|  | D | 6 x | Washers | | |
|  | E | 1 x | Allen Key | | |


1 Insert castors into underside of base

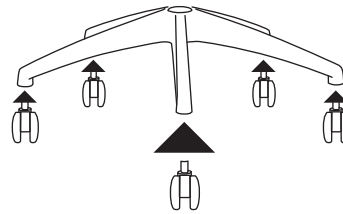


2 Insert gas lift into centre of base

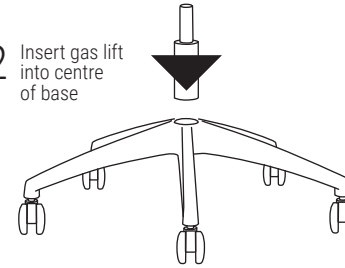

3 Lower seat onto gas lift

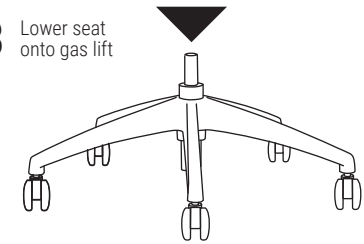

4 Slide backrest onto base and attach

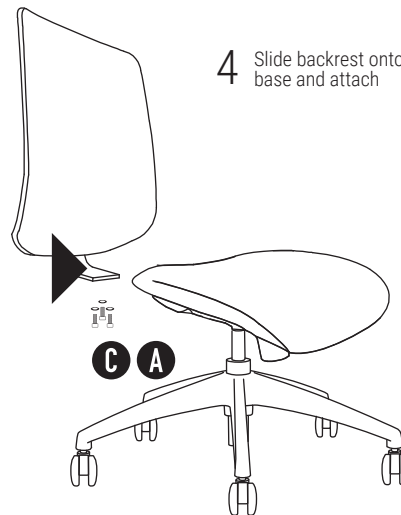

5 Attach arms to side of mechanism

